





Collar Attachment Instructions for Mounting Style Conversion

Recessed to Semi-Recessed Mounted Conversion

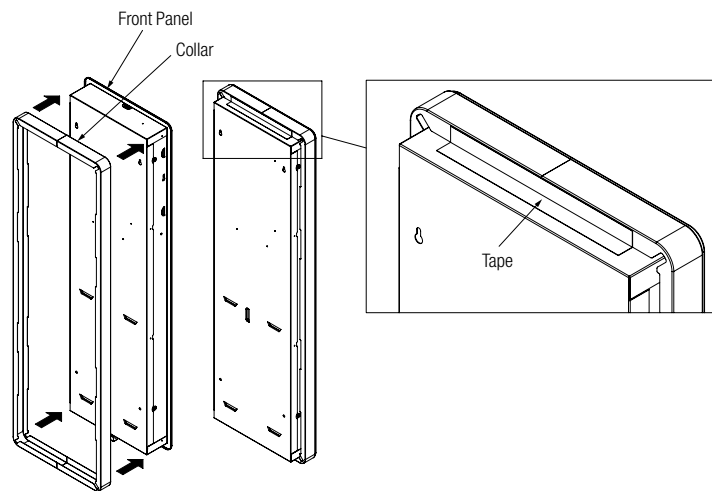

Recessed to Surface Mounted Conversion

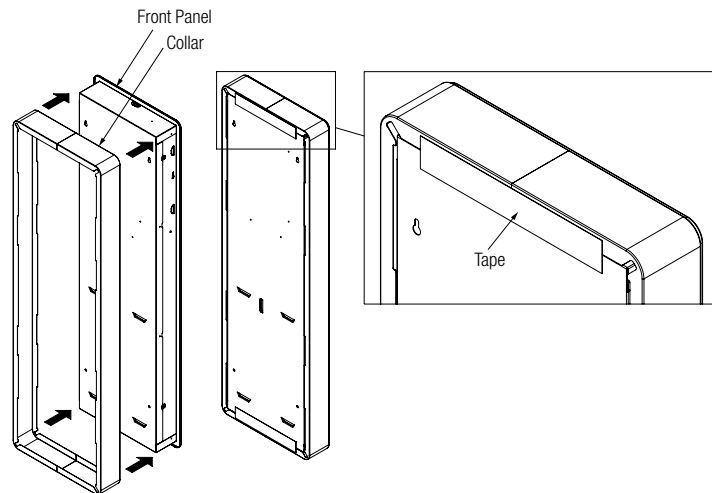

1. If the unit is attached to a mounting surface, remove the entire unit from the mounting surface.
2. Slide the collar over the back of the unit until it contacts the back of the front panel.
3. Apply tape as shown (top and bottom) to hold the collar in place while mounting the unit.



NOTE: The tape will be hidden after installation is complete. No other attachment between the collar and the unit is needed. The collar will be secured in place once the unit is attached to the new mounting surface.

4. Use the mounting holes on the unit to locate and prepare the mounting hole locations on the new mounting surface. Mounting hole locations/spacing can also be found on the product technical data sheet at bradleycorp.com
5. Attach the unit with the collar to the new mounting surface using the appropriate hardware for that surface (not included).