
Restroom Partitions
Inswing

Installation

No-Site™ Strips

- Door Height 58"
- Standard Hinge per Material
- Standard Latch per Material

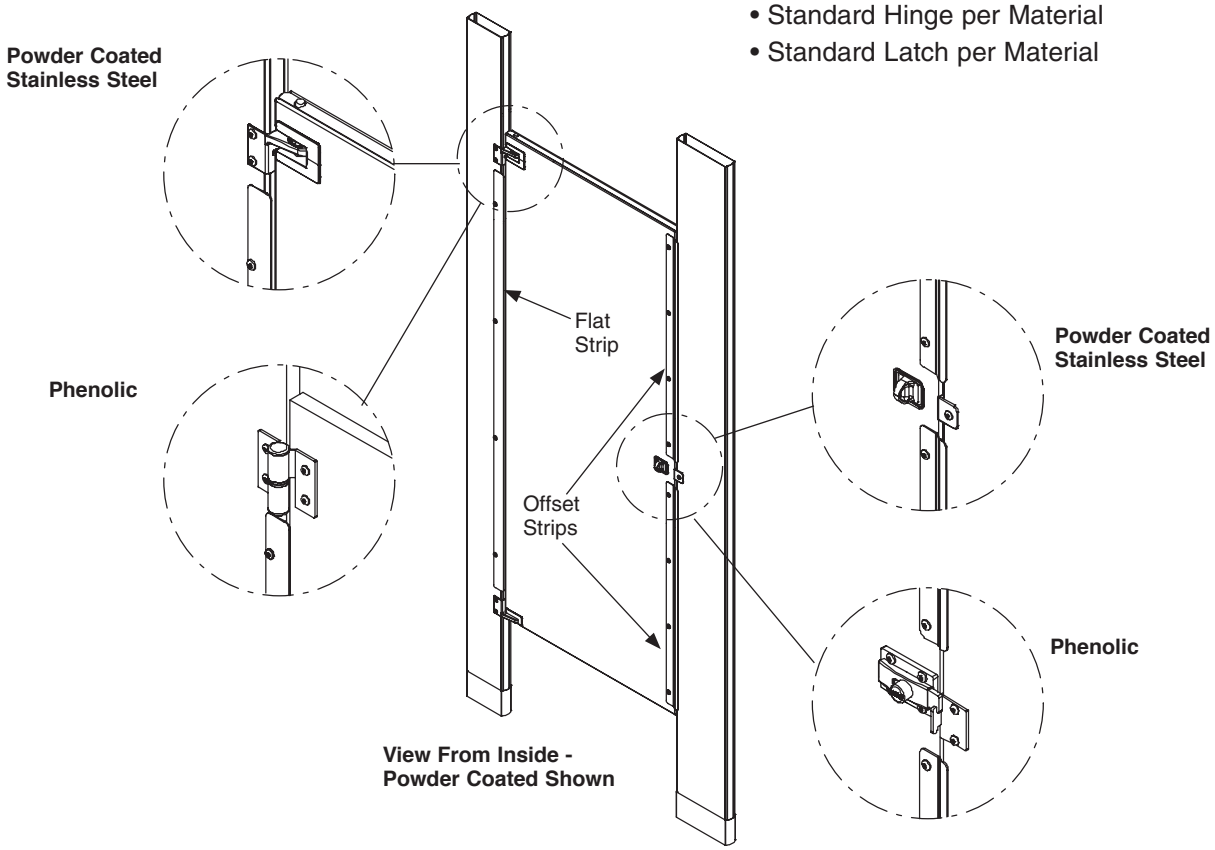

Instructions:

1. Position strips as shown above, so they cover gap between door and pilaster (door should not interfere with strips when opening).
2. Make sure strips are plumb.
3. Use strips as templates for marking pilot holes. See chart below for pilot hole diameter and depth.
4. Drill holes into one side of door and/or pilaster only.
5. Attach using #14 x 5/8" screws (provided).


When installing the partition components, consult the applicable Bradley Partition submittal drawing and standard installations for compartment layout dimensions, locating brackets, and door mounting. The installation should be complete and all hardware installed before attaching the No-Site™ Strips.

Material	Pilot Hole Diameter	Pilot Hole Depth
Powder Coated	3/16"	One Face Only
Stainless Steel	3/16"	One Face Only
Phenolic	15/64"	5/8"

© 2023 Bradley

P.O. Box 309
Menomonee Falls, WI 53052 USA
800 BRADLEY (800 272 3539)
+1 262 251 6000
bradleycorp.com

Restroom Partitions
Outswing

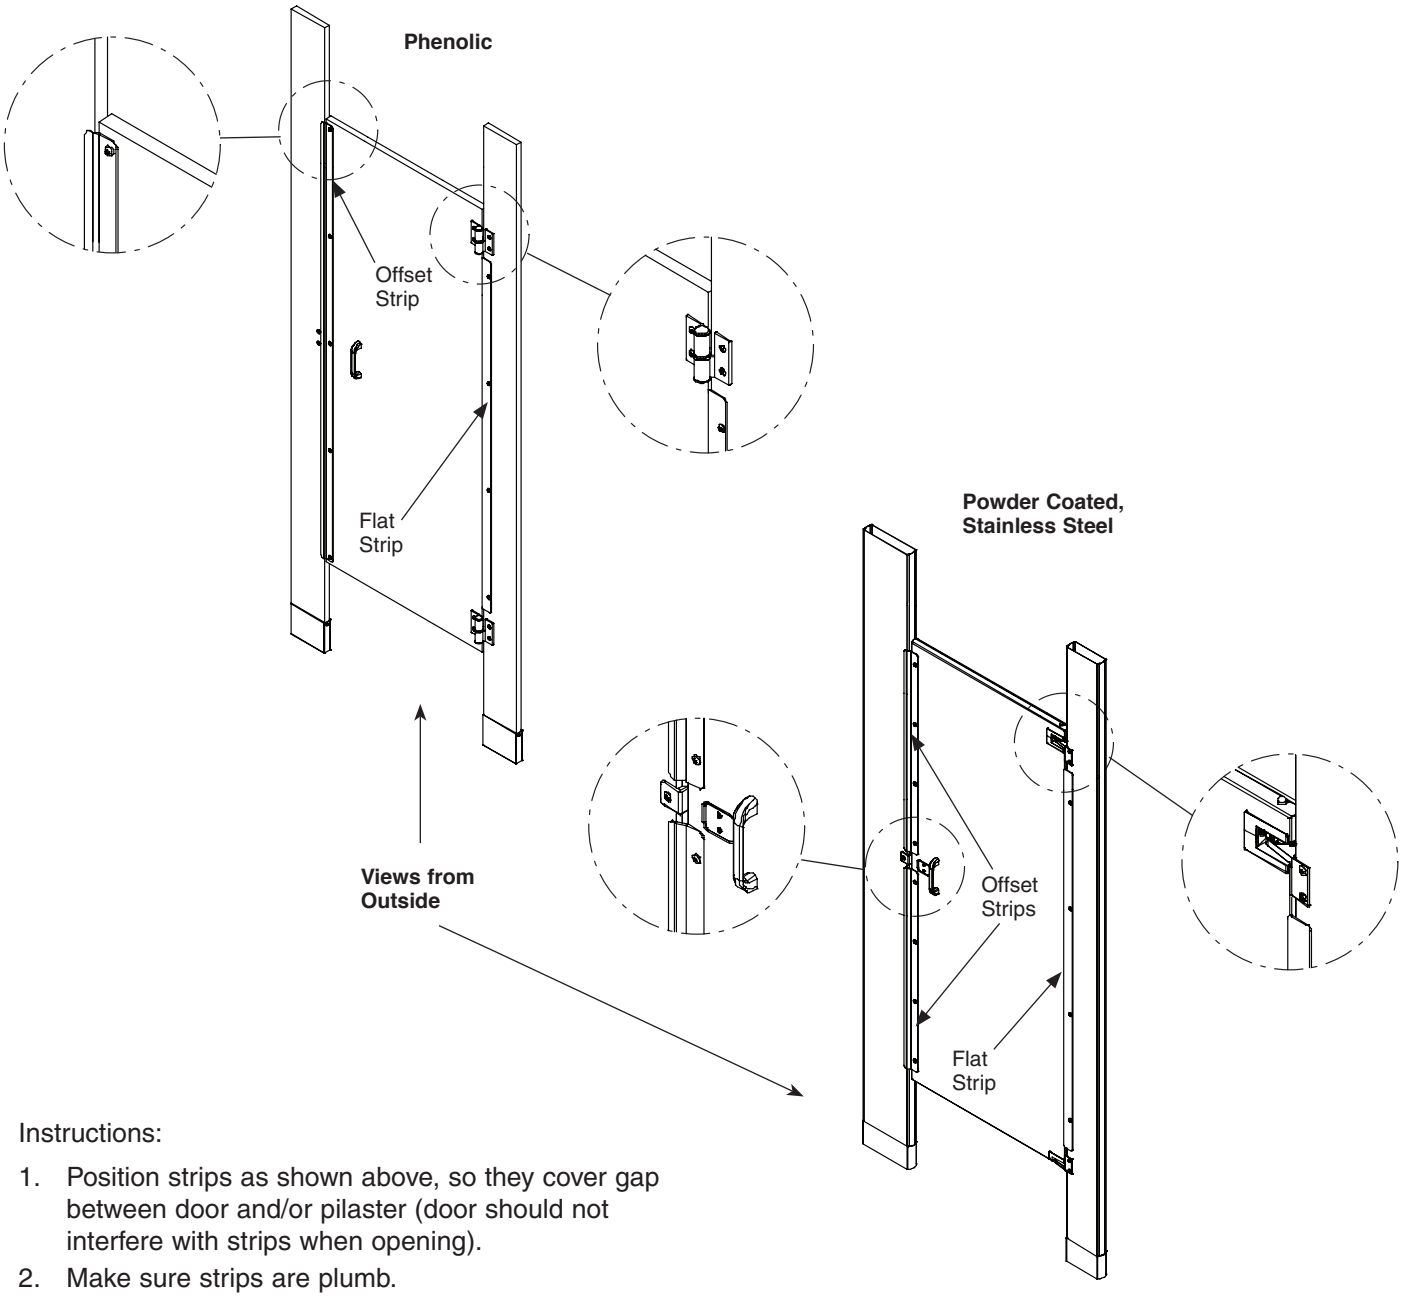

Instructions:

1. Position strips as shown above, so they cover gap between door and/or pilaster (door should not interfere with strips when opening).
2. Make sure strips are plumb.
3. Use strips as templates for marking pilot holes. See chart below for pilot hole diameter and depth.
4. Drill holes into one side of door or pilaster only.
5. Attach using #14 x 5/8" screws (provided).

Material	Pilot Hole Diameter	Pilot Hole Depth
Powder Coated	3/16"	One Face Only
Stainless Steel	3/16"	One Face Only
Phenolic	15/64"	5/8"