


### Equa-Flo Pressure Balancing Valve (August, 2004 to Present)

For Column Showers

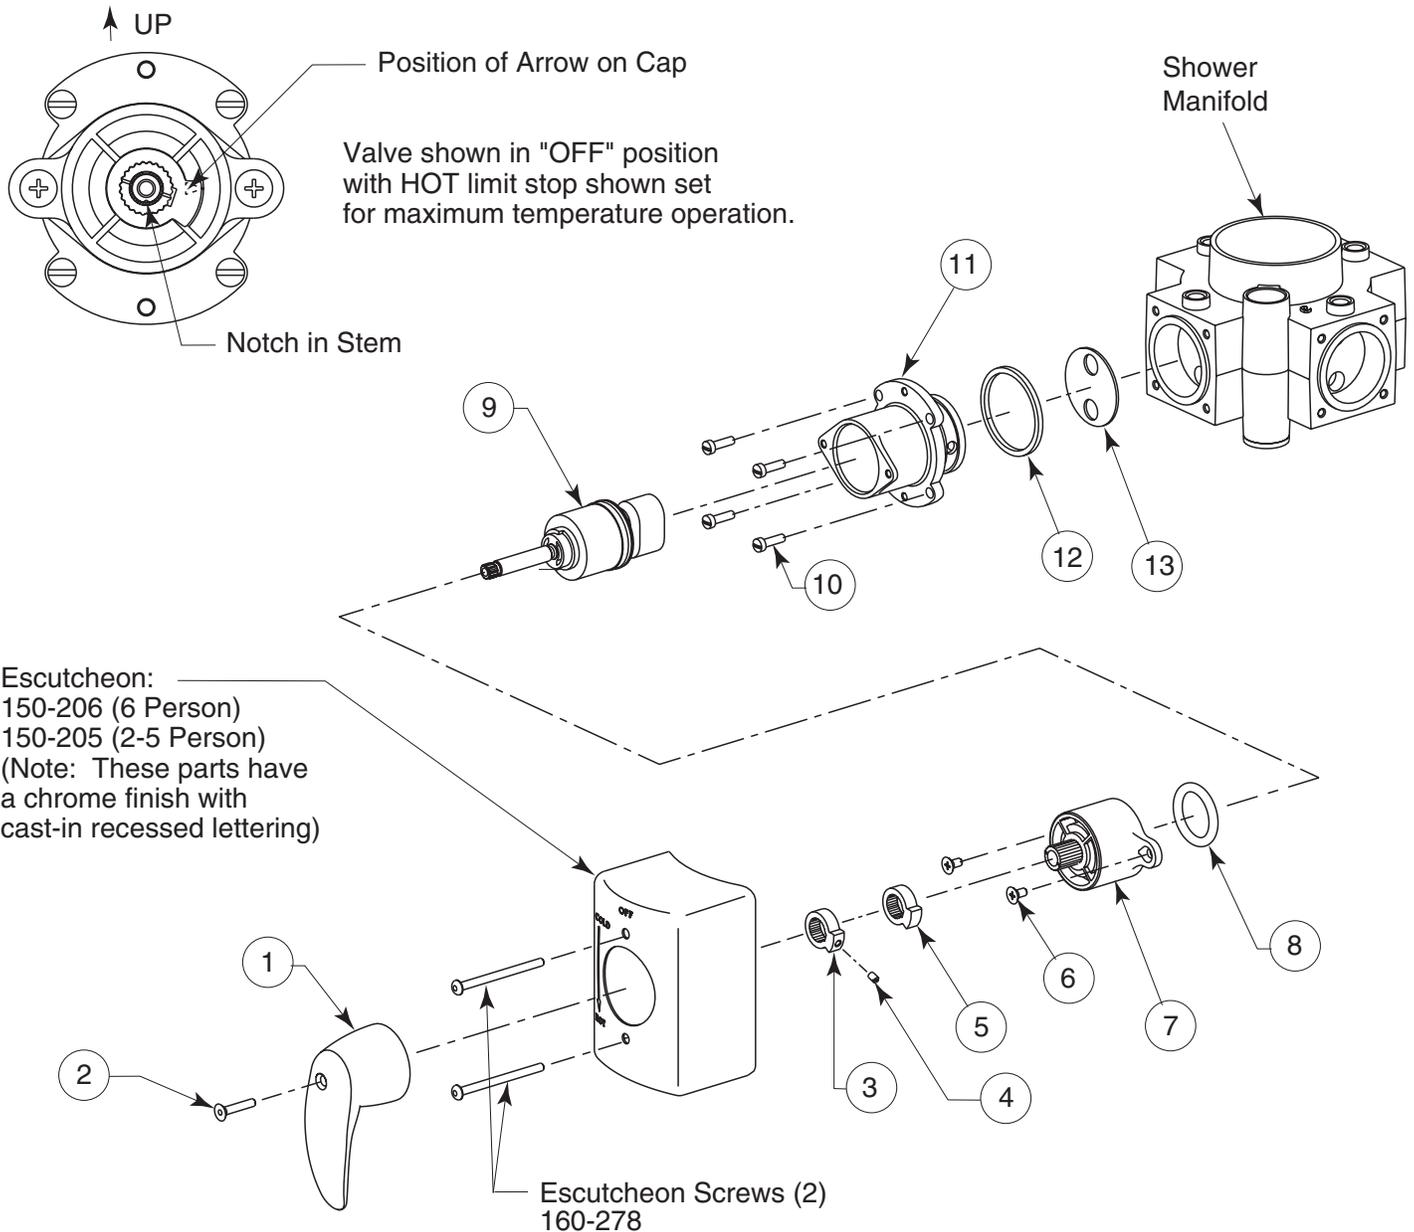

Equa-Flo valves are equipped with a temperature limit stop which can be used to limit the temperature of tempered water discharged.



**IMPORTANT:** The hot limit stop as shown above has been set for maximum temperature operation. For temperatures other than the maximum, the stop may be repositioned as described below. Failure to adjust the hot limit stop to a safe shower temperature could result in the user being scalded.

To adjust the temperature, remove the handle and loosen the set screw. Remove the HOT limit stop and reposition to desired setting. Turn the limit stop clockwise for a HOTTER setting and counterclockwise for a COOLER setting.

When assembling the cartridge assembly into the valve body and cap, lubricate the stem and O-rings with S45-125 grease.

If the desired position falls between adjacent positions on the spline, flip the HOT limit stop over so the other face shows. This shifts the stop position by 1/2 spline.

## Equa-Flo Pressure Balancing Valve Parts List (August, 2004 to Present) For Column Showers

Item	Part No.	Description	Assembly	Gasket Repair Kit S65-278	Cartridge Assembly Repair Kit S65- 277
			Qty		
1	128-161	Handle	1	—	—
2	160-214	Screw #10-24 x 1 Flat Head	1	—	—
3	144-033	Limit Stop, HOT	1	—	—
4	160-252	Set Screw #8-32 x 1/4	1	—	—
5	144-041	OFF Stop	1	—	—
6	160-454	Screw #10-24 x 3/8 Flat Head	2	—	—
7	107-551	Cap	1	—	—
8	125-161	O-Ring	1	1 (See Note 2)	1 (See Note 3)
9	269-1785	Cartridge Assembly	1	—	1 (See Note 3)
10	169-256	Screw #10-24 x 5/8	4	—	—
11	118-143	Valve Body	1	—	—
12	169-269	Gasket	1	1 (See Note 2)	—
13	125-001BS	Washer	1	1 (See Note 2)	—

### Notes:

1. Complete Column Valve Replacement/Retrofit Kit:

S65-266 for 2-5 Person

S65-267 For 6 Person

*Kit part numbers contain all parts necessary to replace/retrofit one station only. Customer must order proper amount of kits; example" Five S65-266 kits required for a 5 Person Column Shower.*

2. Gasket Repair kit also contains the three external O-rings (not shown on exploded diagram) supplied with the 269-1785 cartridge assembly.

3. 269-1785 Cartridge assembly cannot be ordered separately; cartridge assembly must be ordered as part of the Repair Kit that includes the O-ring.